

TO LOCATE HOOD ORNAMENT WITH TEMPLATE
USE THE FOLLOWING PROCEDURE:

1. MEASURE HOOD TO FIND CENTER LINE OF HOOD. MARK CENTER LINE OF HOOD WITH CHALK OR GREASE PENCIL. CAUTION: DO NOT SCRIBE LINE ON HOOD OR USE ANY INSTRUMENT WHICH WILL MAR FINISH ON HOOD.
2. PLACE TEMPLATE ALONG CENTER LINE ON HOOD -- CENTERING TEMPLATE LINE & TAPE IN PLACE. MAKE SURE FRONT OF HOOD LINE IS IN CORRECT POSITION.
3. CENTER PUNCH THROUGH HOLE CENTERS MARKED ON TEMPLATE.
4. REMOVE TEMPLATE & DRILL HOLES AS SHOWN ON TEMPLATE.
5. SCREW STUDS SUPPLIED INTO BODY OF ORNAMENT & PUSH STUDS THROUGH HOOD. USE NUTS & WASHER TO SECURE TO HOOD.

LIST OF PARTS ENCLOSED.

- 1 pc. HOOD ORNAMENT BODY.
- 1 pc. HOOD ORNAMENT WING.
- 1 pc. HOOD ORNAMENT BASE.
- 2 pcs. $\frac{1}{2}$ -20 x $1\frac{1}{2}$ STUD.
- 2 pcs. 8-32 SCREWS FOR WING.
- 1 pc. $\frac{1}{2}$ NUT & WASHER ASSEMBLY (KEPS)
- 2 pcs. $\frac{1}{2}$ SAE FLAT WASHERS.
- U BRACKET BASE FOR HOODS WITH CHROME HOOD MOULDINGS.

HOOD TYPES ON MOST CARS




USE BASE MOULDING



USE BASE MOULDING



DRILL THROUGH MOULDING
MOUNT ORNAMENT DIRECTLY
TO MOULDING

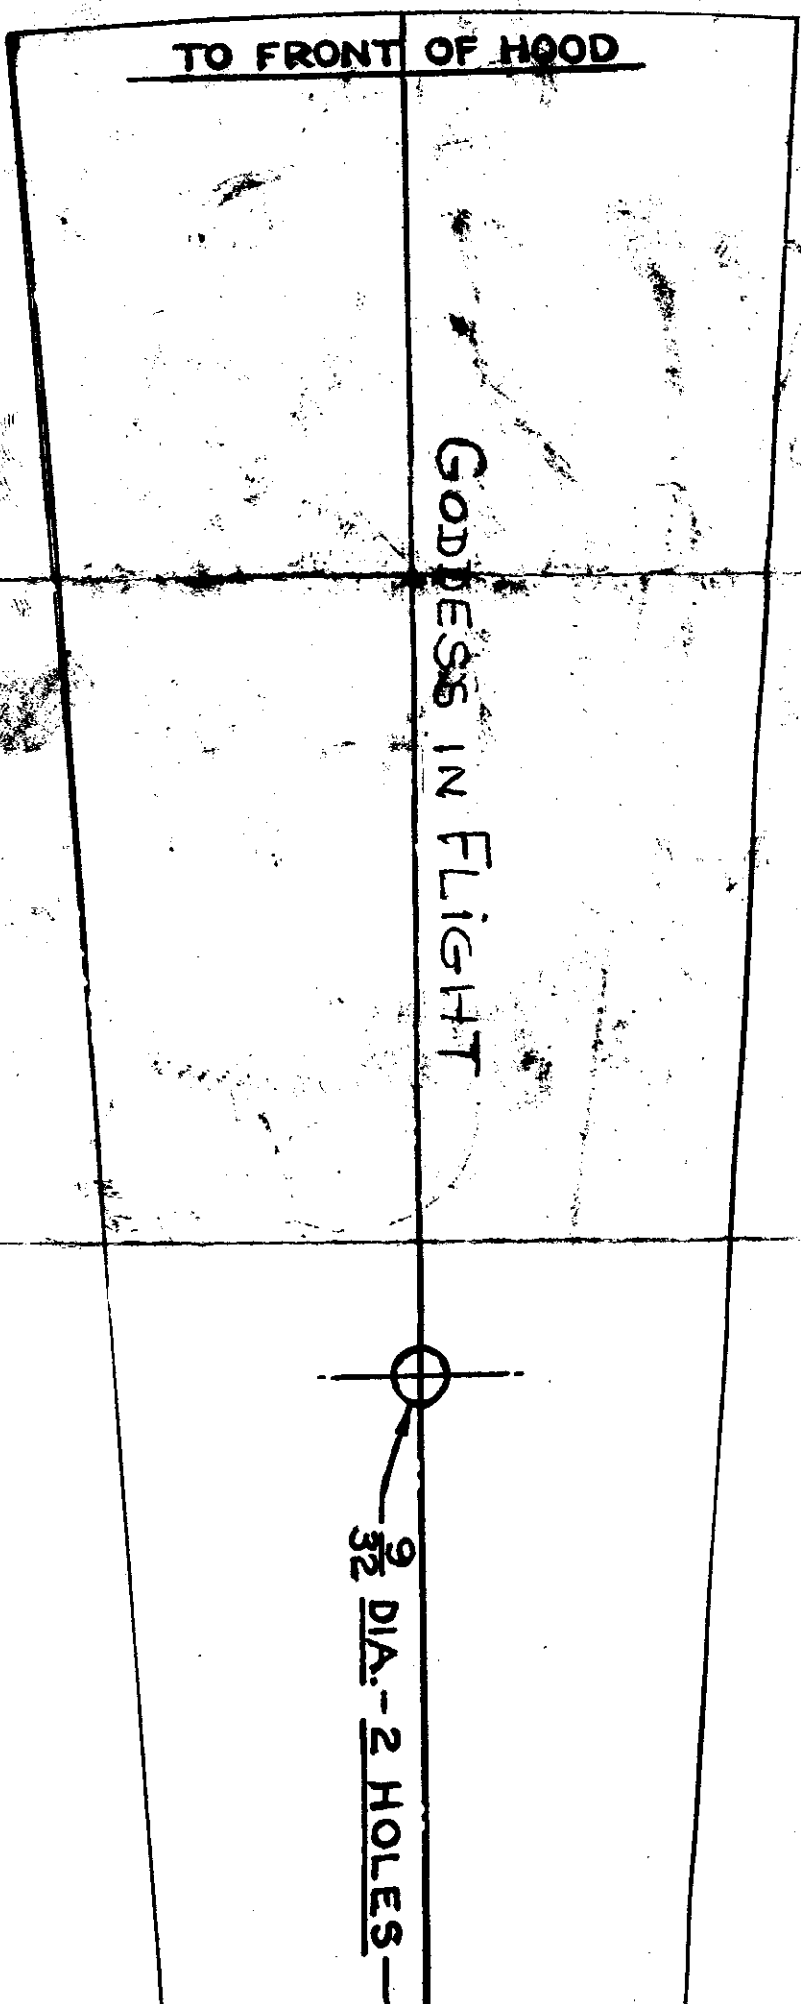

LIST OF PARTS ENCLOSED.

- 1 pc. HOOD ORNAMENT BODY.
- 1 pc. HOOD ORNAMENT WING.
- 1 pc. HOOD ORNAMENT BASE.
- 2 pcs. $\frac{1}{2}$ -20 x 1 $\frac{1}{2}$ STUD.
- 2 pcs. 8-32 SCREWS FOR WING.
- 4 pcs. $\frac{1}{2}$ NUT & WASHER ASSEMBLY (KEPS)
- 2 pcs. $\frac{1}{2}$ SAE FLAT WASHERS.
- U BRACKET BASE FOR HOODS WITH CHROME HOOD MOULDINGS.

HOOD TYPES ON MOST CARS



USE BASE MOULDING



USE BASE MOULDING




DRILL THROUGH MOULDING
MOUNT ORNAMENT DIRECTLY
TO MOULDING



ON POINTED TYPE MOULD-
INGS USE THE U SHAPED
BRACKET SUPPLIED.



RIGHT

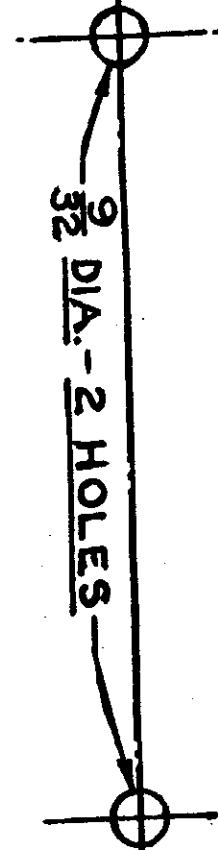

Due to a tooling change, the size of the holes in the template are changed to 3/8". Drill 2 holes 3/8". When you tighten the nuts on the studs, do not use excessive pressure. We are also supplying a rubber gasket to place under the bracket to protect the hood. An alternative method of mounting the hood ornament on cars that have pointed mouldings, we suggest cutting out 9 3/4" of the moulding. Our base moulding is designed to fit in this cutout. Mark the section for cut out, lift the moulding up, and place a piece of heavy paper or cardboard on hood to protect the paint and cut moulding with a hack saw. Fit the supplied ornament base in the cut out and mark the holes for drilling. Careful attention to this procedure should result in a very professional installation.