

TO LOCATE HOOD ORNAMENT WITH TEMPLATE  
USE THE FOLLOWING PROCEDURE:

1. MEASURE HOOD TO FIND CENTER LINE OF HOOD. MARK CENTER LINE OF HOOD WITH CHALK OR GREASE PENCIL. CAUTION: DO NOT SCRIBE LINE ON HOOD OR USE ANY INSTRUMENT WHICH WILL MAR FINISH ON HOOD.
2. PLACE TEMPLATE ALONG CENTER LINE ON HOOD -- CENTERING TEMPLATE LINE & TAPE IN PLACE. MAKE SURE FRONT OF HOOD LINE IS IN CORRECT POSITION.
3. CENTER PUNCH THROUGH HOLE CENTERS MARKED ON TEMPLATE.
4. REMOVE TEMPLATE & DRILL HOLES AS SHOWN ON TEMPLATE.
5. SCREW STUDS SUPPLIED INTO BODY OF ORNAMENT & PUSH STUDS THROUGH HOOD. USE NUTS & WASHER TO SECURE TO HOOD.

**LIST OF PARTS ENCLOSED.**

- 1 pc. HOOD ORNAMENT BODY.
- 1 pc. HOOD ORNAMENT WING.
- 1 pc. HOOD ORNAMENT BASE.
- 2 pcs.  $\frac{1}{2}$  -20 x  $1\frac{1}{2}$  STUD.
- 2 pcs. 8-32 SCREWS FOR WING.
- 1 pc.  $\frac{1}{2}$  NUT & WASHER ASSEMBLY (KEPS)
- 2 pcs.  $\frac{1}{2}$  SAE FLAT WASHERS.
- U BRACKET BASE FOR HOODS WITH CHROME HOOD MOULDINGS.

**HOOD TYPES ON MOST CARS**




USE BASE MOULDING



USE BASE MOULDING



DRILL THROUGH MOULDING  
MOUNT ORNAMENT DIRECTLY  
TO MOULDING

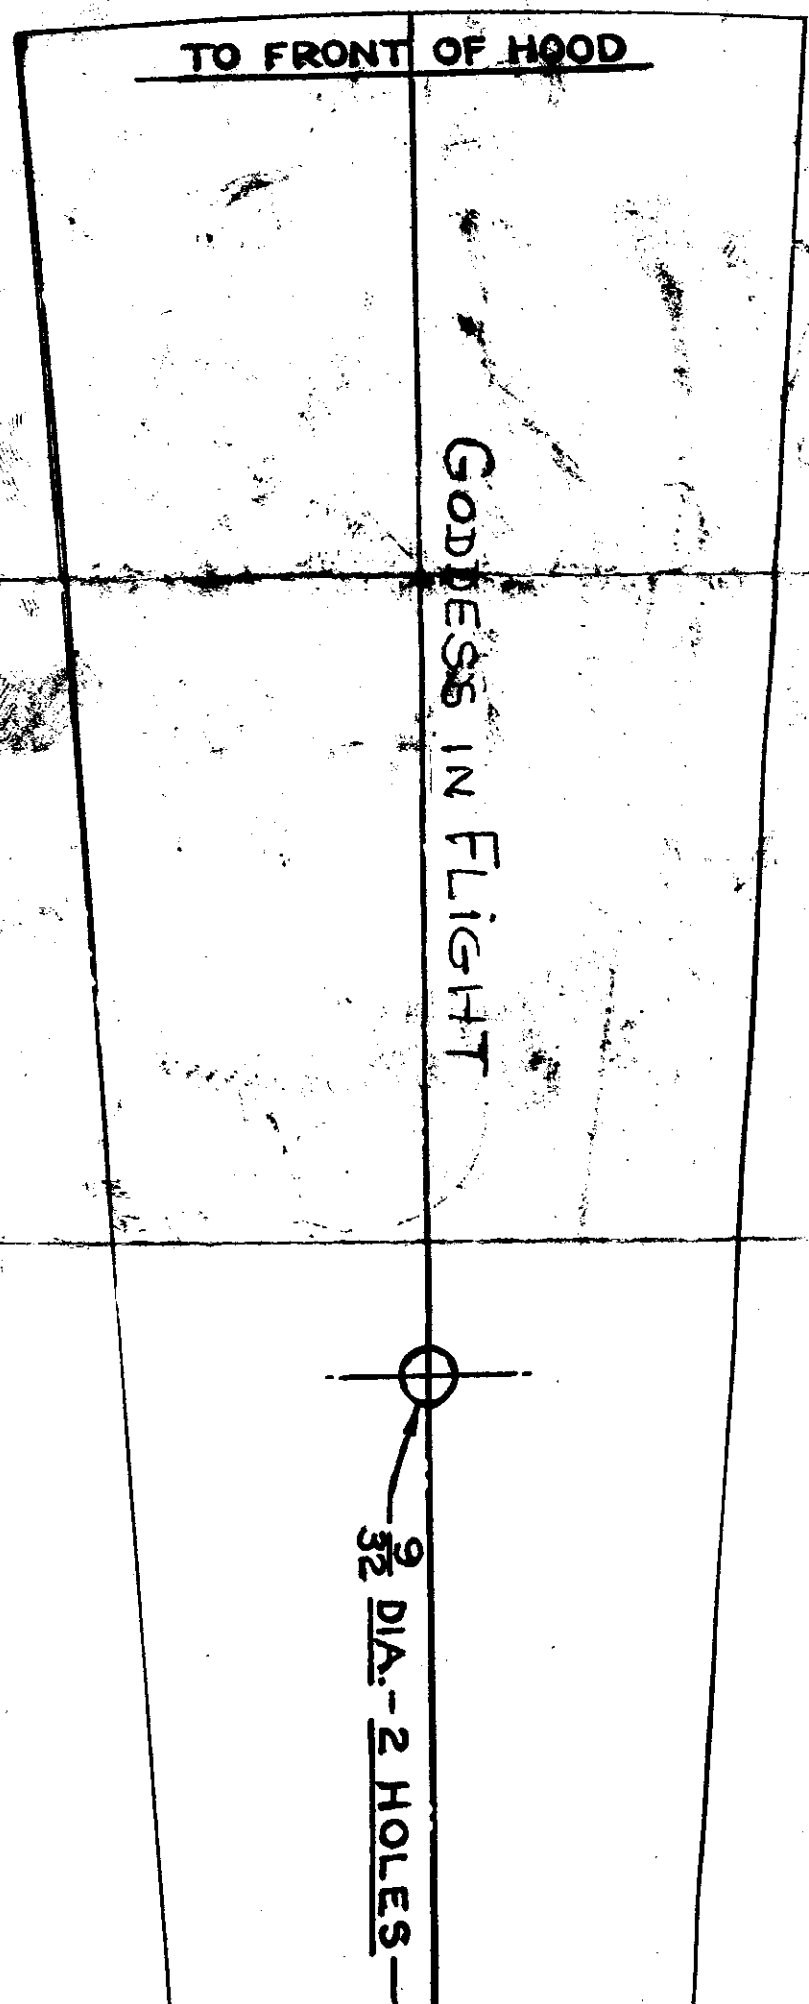

**LIST OF PARTS ENCLOSED.**

- 1 pc. HOOD ORNAMENT BODY.
- 1 pc. HOOD ORNAMENT WING.
- 1 pc. HOOD ORNAMENT BASE.
- 2 pcs.  $\frac{1}{2}$  -20 x  $1\frac{1}{2}$  STUD.
- 2 pcs. 8-32 SCREWS FOR WING.
- 4 pcs.  $\frac{1}{2}$  NUT & WASHER ASSEMBLY (KEPS)
- 2 pcs.  $\frac{1}{2}$  SAE FLAT WASHERS.
- U BRACKET BASE FOR HOODS WITH CHROME HOOD MOULDINGS.

**HOOD TYPES ON MOST CARS**



USE BASE MOULDING



USE BASE MOULDING




DRILL THROUGH MOULDING  
MOUNT ORNAMENT DIRECTLY  
TO MOULDING



ON POINTED TYPE MOULD-  
INGS USE THE U SHAPED  
BRACKET SUPPLIED.



RIGHT

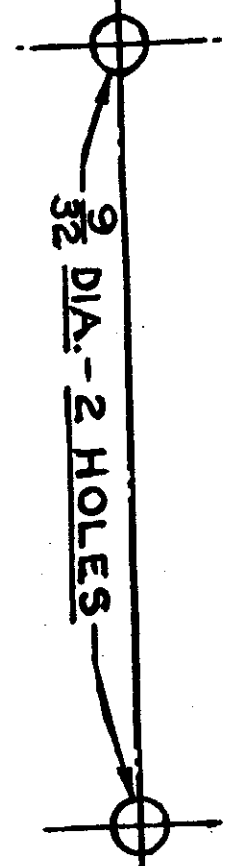

Due to a tooling change, the size of the holes in the template are changed to 3/8". Drill 2 holes 3/8". When you tighten the nuts on the studs, do not use excessive pressure. We are also supplying a rubber gasket to place under the bracket to protect the hood. An alternative method of mounting the hood ornament on cars that have pointed mouldings, we suggest cutting out 9 3/4" of the moulding. Our base moulding is designed to fit in this cutout. Mark the section for cut out, lift the moulding up, and place a piece of heavy paper or cardboard on hood to protect the paint and cut moulding with a hack saw. Fit the supplied ornament base in the cut out and mark the holes for drilling. Careful attention to this procedure should result in a very professional installation.